



Sensor Shield


Protective Connector for ODiSI Sensors

The Sensor Shield is a single-channel LC/APC to LC/APC mating sleeve that provides convenient protection of ODiSI sensors, tethers on remote modules or patch cords. The Sensor Shield includes adhesive tape mounted on the underside so that sensor ends and connections can be secured and held in place. While the Sensor Shield utilizes a dual bulkhead connector, each Sensor Shield can accommodate only one pass-through connection using Luna sensors and remote module connectors.

The Sensor Shield is constructed of ABS plastic with metallic bulkhead connectors. It is rated for a temperature range of -20 °C to 80 °C.

KEY FEATURES

- Provides protection for single fiber sensor connection
- LC/APC bulkhead connectors for Luna HD sensors, remote module tethers or patch cords
- Recessed connector pockets

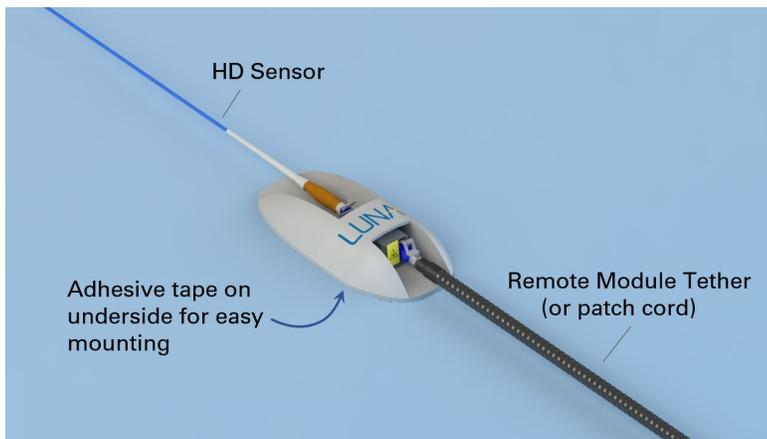

ORDERING

Part Number	Description
OPT06175-SS	Sensor Shields – pack of 4 shields