


NOTE - TO INSTALL CABLE GLAND OVER EXISTING CONNECTOR, REMOVE SEAL FROM GLAND AND SLIT WITH KNIFE. INSERT CONNECTOR THROUGH COMPONENTS AND REINSTALL SEAL. BESURE IT IS SEATED PROPERLY. REPLACE CABLE GLAND WITH PLUG FOR SINGLE END PROTECTION.

KIT CONTENTS		
ITEM	QTY	DESCRIPTION
1	1	102 MM LONG SLEEVE
2	1	FC/APC ADAPTER - NOT SHOWN
3	2	CABLE GLAND - ACCEPTS 3 TO 7MM CABLE
4	1	PLUG - USE TO PROTECT ONE CABLE END
5	3	O-RING SEALS - NOT SHOWN

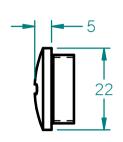

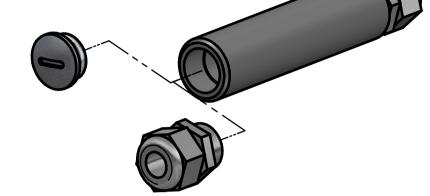

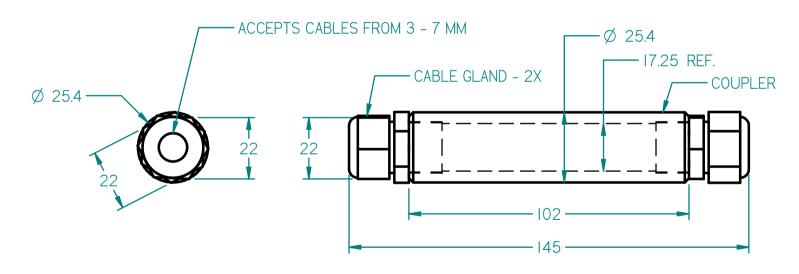

## MICRON OPTICS - PROPRIETARY

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND MAY NOT BE REPRODUCED IN WHOLE OR PART WITHOUT THE EXPRESSED WRITTEN PERMISSION OF MICRON OPTICS, INC. FURTHER, NO USE OF THE INFORMATION CONTAINED HEREIN MAY BE MADE WITHOUT FIRST SECURING THE PRIOR WRITTEN APPROVAL OF MICRON OPTICS NC.

THIS METRIC DRAWING HAS BEEN PREPARED IN ACCORDANCE WITH ANSI Y14.5M - 1982. DIMMENSIONS ARE IN MILLIMETERS. INCHES ARE IN (I) AND ARE FOR REFERENCE.

## GENERAL TOLERANCES:

UNLESS OTHERWISE SPECIFIED, BREAK ALL SHARP EDGES

4 PLACE DECIMAL +/- .0005 3 PLACE DECIMAL +/- .003 2 PLACE DECIMAL +/- .0I ANGULAR DIM. +/- I DEG

## CONNECTOR PROTECTION FITTING KIT CUSTOMER DRAWING

DESIGNED DRAWN FINAL AF

FINAL APPROVAL SIZE

SIZE A SHEET NO.

DATE 4/29/13

DRAWING NO.

MICRON

10001

ISSUE 3 - 4/29/I3 - ADDED COUPLER ID FOR REFERENCE ISSUE 2 - 6/I2/I2 - ADDED PLUG TO KIT TO GIVE USER OPTION TO USE EITHER SINGLE OR DOUBLE ENDED.